

APPARATUS" or "CO<sub>2</sub> FIRE APPARATUS," as appropriate, in not less than 2-inch red letters. The valves of all branch pipes leading to the several compartments shall be distinctly marked to indicate the compartments or parts of the vessel to which they lead.

**§ 35.40-15 Fire hose stations—TB/ALL.**

At each fire hose valve there shall be marked in not less than 2-inch red letters and figures: "FIRE STATION 1," 2, 3, etc.

**§ 35.40-17 Foam hose/monitor stations—T/ALL.**

(a) At each required foam hose/monitor valve there shall be marked in not less than 2-inch red letters and figures: "FOAM STATION 1," 2, 3, etc.

(b) [Reserved]

**§ 35.40-18 Water spray systems—TB/ALL.**

(a) Water spray system apparatus shall be marked: "WATER SPRAY SYSTEM," as appropriate, in not less than 2-inch red letters.

(b) The control valve, and its control if located remotely, shall be distinctly marked to indicate the compartment protected.

**§ 35.40-20 Emergency equipment—TB/ALL.**

Each locker and space where emergency equipment is stowed must be marked "EMERGENCY EQUIPMENT" or "SELF-CONTAINED BREATHING APPARATUS", as appropriate.

[CGD 86-036, 57 FR 43824, Oct. 23, 1992]

**§ 35.40-25 Fire extinguishers—TB/ALL.**

Each fire extinguisher shall be marked with a number and the location where stowed shall be marked in corresponding numbers in at least ½ inch figures.

**§ 35.40-30 Instructions for changing steering gear—TB/ALL.**

Instructions in at least ½ inch letters and figures shall be posted in the steering engineroom, relating in order, the different steps to be taken in changing to the emergency steering gear. Each clutch, gear wheel, lever, valve or switch which is used during

the changeover shall be numbered or lettered on a brass plate or painted so that the markings can be recognized at a reasonable distance. The instructions shall indicate each clutch or pin to be "in" or "out" and each valve or switch which is to be "opened" or "closed" in shifting to any means of steering for which the vessel is equipped. Instructions shall be included to line up all steering wheels and rudder amidship before changing gears.

**§ 35.40-35 Rudder orders—TB/ALL.**

At all steering stations, there shall be installed a suitable notice on the wheel or device or in such other position as to be directly in the helmsman's line of vision, to indicate the direction in which the wheel or device must be turned for "right rudder" or "left rudder."

**§ 35.40-40 Marking and instructions for fire and emergency equipment—TB/ALL.**

Lifesaving appliances, instructions to passengers, and stowage locations for all tank vessels must be in accordance with subchapter W (Lifesaving Appliances and Arrangements) of this chapter.

[CGD 84-069, 61 FR 25287, May 20, 1996]

**PART 36—ELEVATED TEMPERATURE CARGOES**

**Subpart 36.01—General**

Sec.

36.01-1 Scope of regulations—TB/ALL.

36.01-5 Certificate of inspection—TB/ALL.

**Subpart 36.05—Cargo Tanks**

36.05-1 Installation of cargo tanks—TB/ALL.

36.05-10 Protection of personnel—TB/ALL.

**Subpart 36.10—Piping, Valves, Fittings, and Accessory Equipment**

36.10-1 Cargo pump relief valves—TB/ALL.

**Subpart 36.20—Vents and Ventilation**

36.20-1 Flame screens—TB/ALL.

36.20-5 Ventilation of pumproom—TB/ALL.

**Subpart 36.30—Periodic Inspections**

36.30-1 Lagged tanks—TB/ALL.